



SIDE TIES

INSTRUCTIONS

WATCH THE VIDEO AT: www.lcenterprises-usa.com/video

Side Ties are installed in the following manner:

1. Push tie around H-Post and two strand on the chain-link fabric that is closest to the post/rail.
2. Position ends of tie in same direction of fabric line on the side of post/rail. **See Diagram 1.**
3. Pinch ends together and insert into twisting tool.
4. Twist tie with drill until tie end breaks off. (Optional: Bend remaining end with pliers until it breaks off at the score. Should break off with one or two bends.)
5. Pick up broken ends (if required).

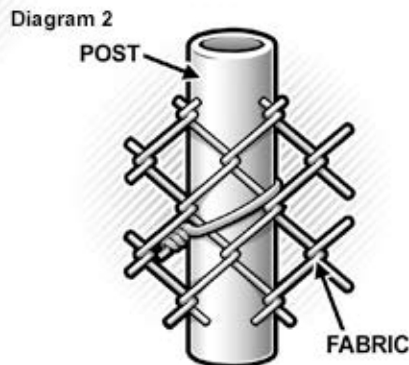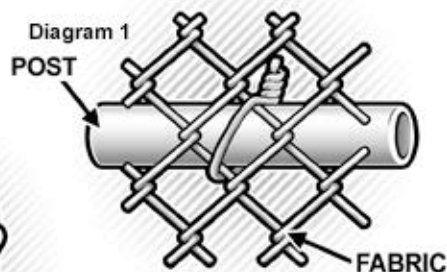

CAUTION: Safety glasses MUST be worn while twisting ties. The small ends of the tie wires will fly out of the side slots and may cause injury if they hit operator in the eye.

NOTE 1: *The Side Ties are for use with 2" mesh only.*

NOTE 2: *The Easy Twist Tool may break off one or both tails of the tie unless noted in plans. It is an acceptable practice to allow a tie with or without a tail.*

WARNING: Do not use this where children are present. Only recommended for heavy commercial/industrial applications with low pedestrian traffic.