

**L&C Enterprises – USA, Inc.**  
6652 N.75 Drive, Escanaba, MI 49829  
Phone: (906) 786-1008  
Toll Free: (866) 786-1009

# EASY TWIST TIES™

## Instructions for CRASH BARRIER CABLE & TENSION WIRE

**Easy Twist Ties™** for Crash Barrier Cable and Tension Wire are installed in the following manner.

1. Push tie around the knuckle of the chain link fabric in a vertical direction. Also going around the cable/tension wire.
2. Position ends of tie in same direction of fabric line on the side of post/rail. See *diagram 1*.
3. Pinch ends together and insert into twisting tool. Ends should be evenly inserted: bumping up to the back of the twisting tool.
4. Twist tie with drill until tie end breaks off. (Optional: Bend remaining ends with pliers until they break off at the score. Should break off with one or two bends.)
5. Pick up broken ends (if required).

**CAUTION: Safety glasses MUST be worn while twisting ties. The small ends of the tie wires will fly out of the side slots and may cause injury if they hit operator in the eye.**

**NOTE 1:** When using 3/8 cable use a tension wire tie, but only going around one side of the diamond, not the knuckle. See *diagram 2*

**NOTE 2:** The Easy Twist Tool may break off one or both tails of the tie. It is an acceptable practice to allow a tie with or without a tail.


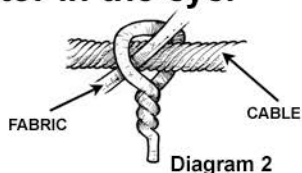


Diagram 1

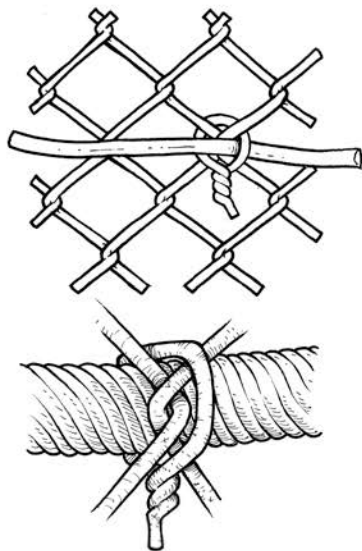

**WARNING: Do not use this where children are present. Only recommended for heavy commercial/industrial applications with low pedestrian traffic.**